



Manufacturing Intelligent Compressed Air Products Since 1983  
 11510 Goldcoast Drive, Cincinnati, OH, USA 45249-1621  
 (513) 671-3322 FAX (513) 671-3363 Email: techelp@exair.com




## HAZARDOUS LOCATION NEMA 4-4X CABINET COOLER INSTALLATION & MAINTENANCE

Models: HZ4610 through HZ4640, HZ4710 through HZ4740, HZ4810 through HZ4840  
 HZ4610SS through HZ4640SS, HZ4710SS through HZ4740SS, HZ4810SS through HZ4840SS  
 HZ4610SS-316 through HZ4640SS-316, HZ4710SS-316 through HZ4740SS-316,  
 HZ4810SS-316 through HZ4840SS-316

### \*\*WARNINGS\*\* - OPERATING OUTSIDE THESE PARAMETERS MAY IMPAIR SUITABILITY FOR CLASSIFIED AREAS

1. MAXIMUM INLET PRESSURE 125 PSIG (8.6 BAR).
2. MAXIMUM INLET AIR TEMPERATURE 45 DEGREES C
3. EQUIPMENT MUST BE MOUNTED VERTICALLY ON A FLAT 4(X) ENCLOSURE TO MAINTAIN NEMA 4(X) RATING.  
*(IF TOP OF THE CABINET IS NOT AVAILABLE, A SIDE MOUNT KIT MAY BE USED.)*
4. POTENTIAL ELECTROSTATIC CHARGING HAZARD – CLEAN ONLY WITH A DAMP CLOTH

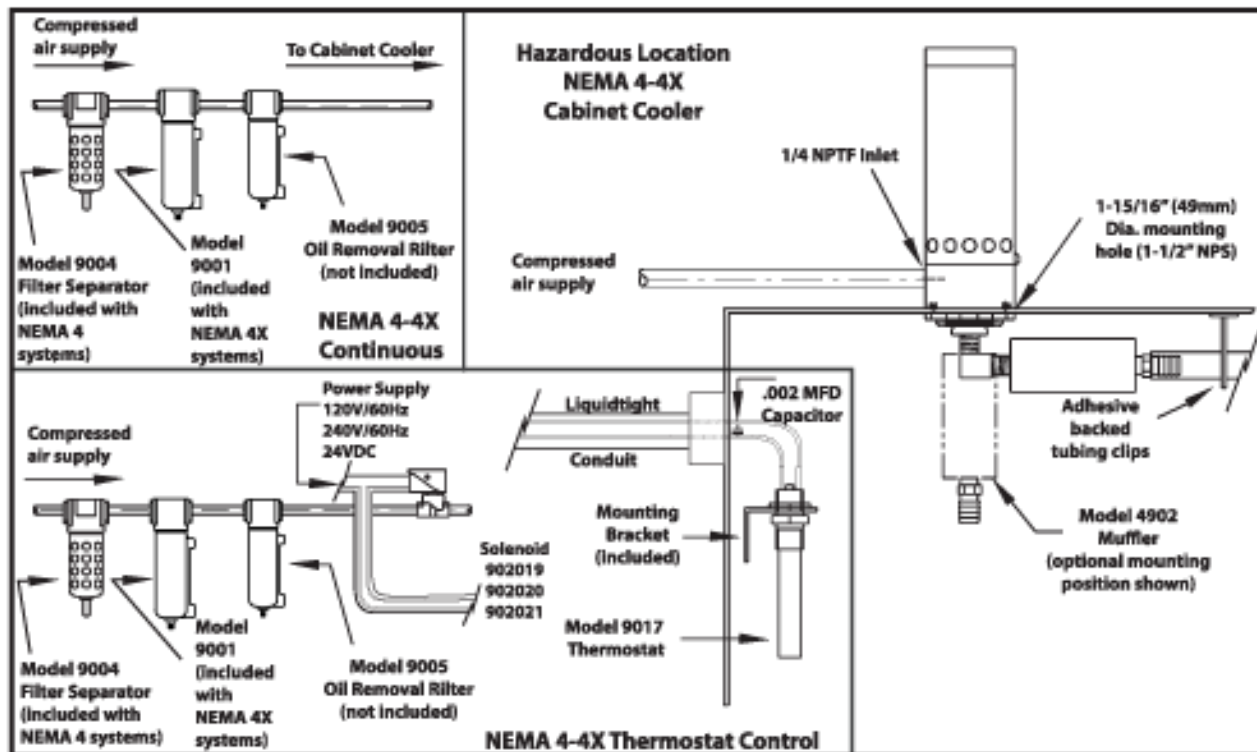

### INTRODUCTION

EXAIR's Hazardous Location Cabinet Cooler System cools electronic cabinets using compressed air through a vortex tube to remove up to 2,800 BTU/HR of heat. The Hazardous Location Cabinet Cooler is not itself a purged and pressurized control system and should not be relied upon nor used in place of a purged and pressurized controller. The Hazardous Location Cabinet Cooler System must be used in conjunction with a properly sized purged and pressurized enclosure that must be able to vent the additional air introduced to the cabinet by the Cabinet Cooler. EXAIR does not supply purge or pressurization systems. The vent supplied with purge system will need to be properly sized to vent the additional cool air produced by the Hazardous Location Cabinet Cooler System to prevent over-pressurization of the cabinet.

**EXAIR Hazardous Location Cabinet Coolers are UL Classified to U.S. and Canadian safety standards.**

### **COMPRESSED AIR LINE SIZES**

Compressed air lines should be sized to hold pressure drops to a minimum. When installing supply lines, use 1/4" pipe for runs up to 10' (3m). Use 3/8" pipe for runs up to 50' (15.2m), and 1/2" pipe for runs over 50' (15.2m). If using compressed air hose, consider 3/8" I.D. hose to be the same as 1/4" pipe and 1/2" I.D. hose to be the same as 3/8" pipe. Do not use restrictive fittings such as quick connects. They can "starve" the Hazardous Location NEMA 4-4X Cabinet Cooler by causing excessive line pressure drop.

### **COMPRESSED AIR SUPPLY**

With proper filtration and separation of dirt, moisture and oil from the compressed air supply, the Hazardous Location Cabinet Cooler will run for years with no maintenance required. Pressurized air supply provided to the Cabinet Cooler must be the same quality (free of contaminants, instrument quality, compressor intake in unclassified location) as the air used in the purge and pressurize the enclosure it is installed on. Filtering for contaminants and separation of moisture is required for all Hazardous Location NEMA 4-4X Cabinet Coolers.

All Hazardous Location NEMA 4 Cabinet Cooler Systems include a Model 9004 Automatic Drain Filter Separator (Hazardous Location NEMA 4X Cabinet Cooler Systems include Model 9001) which provide 5-micron filtration. The automatic drain is float actuated to eliminate the possibility of passing water into the enclosure, even during continuous operation. **(Impulse-type automatic drains must not be used. They may allow water to pass through the filter during continuous operation.)**

To prevent problems associated with oil, use an oil removal filter (Model 9005 Oil Removal Filter not included). The oil removal filter should be used downstream from the automatic drain filter separator. Filters should be used close to each Hazardous Location NEMA 4-4X Cabinet Cooler, within 10 to 15' (3 to 4.6m) is best.

Both the filter separator and oil removal filters should be located in a non-hazardous area, so that the filter can be changed without introducing hazardous substances to the enclosure through the plumbing.

Hazardous Location NEMA 4-4X Cabinet Coolers are designed to use normal shop air supplies of 80 to 100 PSIG (5.5 to 6.9 BAR). Thermostat control can minimize compressed air usage and should be used whenever possible.

### **USING THE HAZARDOUS LOCATION NEMA 4-4X CABINET COOLER**

*For use on a Flat Surface of a NEMA Type 4/4X Enclosure. The Hazardous Location Cabinet Cooler is suitable for Class I Division 1 Groups A, B, C and D; Class II Division 1 Groups E, F and G; Class III*

Install in accordance with the National Electric Code (NEC), Canadian Electrical Code (CEC), NFPA 496 and applicable local code. Do not operate the cooler until the purge system on the enclosure completed its initial cycle and a proper safe environment is created.

Note: The UL Classification only applies to the Cabinet Cooler itself. The solenoid is separately listed for Hazardous Locations (Parker Safety Shutoff Valve for Hazardous Areas E23267). The accessories (filter, cold air distribution kit and thermostat) are not UL certified for classified areas.

The Hazardous Location NEMA 4-4X Cabinet Cooler mounts to the enclosure thru a 1-15/16" (49mm) 1-1/2" NPS diameter hole. A nut is supplied to lock it in place. The Hazardous Location NEMA 4-4X Cabinet Cooler should be mounted on the top only (vertically). Side mounting is possible with use of a Model 4907 90° Side Mount Kit. After mounting to the Hazardous Location NEMA 4-4X Cabinet Cooler, connect the Model 4902 muffler to the cold outlet of Hazardous Location NEMA 4-4X Cabinet Cooler.

Hazardous Location NEMA 4-4X Cabinet Coolers will provide a 54°F temperature drop from supply air temperature at 100 PSIG (6.9 BAR). An elevated inlet temperature will produce a corresponding rise in cold air temperature and reduction in cooling capacity.

Note: The poppet valve, provided with the Cabinet Cooler to prevent air from leaking out from the purged and pressurized enclosure, must be verified during installation that it will not cause the purged and pressurized enclosure to drop below the required minimum enclosure pressure when the cooler is not in service.

Warning: The end user shall avoid installation of the device in a Class II environment where dust may be readily disturbed from the exhaust shroud and any dust layer that is formed in the vicinity of the cooler must be removed by cleaning.

### **NOISE MUFFLING**

All Hazardous Location NEMA 4-4X Cabinet Cooler Systems are equipped with sound muffling. The Model 4902 Cold Muffler (included) can be easily installed on the cold air discharge (see diagram). With this muffler installed, the noise level is less than 75 dBA.

### **COLD AIR DISTRIBUTION KIT**

The Model 4904 Cold Air Distribution Kit includes 8' (2.4m) of flexible (1/2" I.D.) vinyl tubing, (8) adhesive backed clips to hold the tubing in place, (1) elbow and (1) end plug. The tubing is used to direct the cold air for circulation or to hot spots, as needed. Holes may be drilled or cut ("V" shaped) in the tubing. If the end is plugged, use at least (6) 1/8" (3.2mm) diameter holes in tube to eliminate excessive back pressure on the Hazardous Location NEMA 4-4X Cabinet Cooler.

### **HUMIDITY**

The Hazardous Location NEMA 4-4X Cabinet Cooler incorporates a low-pressure relief valve for both the vortex tube and cabinet air exhaust. This valve closes and seals when the cooler is not operating to maintain the integrity of the NEMA 4-4X enclosure. During continuous operation, relative humidity inside the enclosure stabilizes at 45%. No moisture condenses inside the enclosure.

### **THERMOSTAT**

**Warning: Any solenoid valve or thermostat used with the Hazardous Location NEMA 4-4X Cabinet Cooler must be used in a suitable environment for these individual electrical requirements. For any questions about where to mount an electrical device in a hazardous location please refer to local codes, the occupational safety and accident prevention regulations, and the purge system manufacturer.**

Some Hazardous Location NEMA 4-4X Cabinet Cooler Systems are supplied with thermostat control. Assuming a purge system is used, the Model 9017 Thermostat should be located inside the enclosure using the mounting bracket (included). The thermostat is not position sensitive and should be mounted in a hot area inside the enclosure.

The electrical requirement is 120V/60Hz, 110V/50Hz, 240V, 50/60Hz or 24VDC, and should be connected to the hot line supplying the solenoid valve. It is normally open, actuated closed, when the temperature rises. The thermostat is preset at 95°F (35°C). It will normally hold that setting within + or - 2°F (1°C) inside the cabinet.

#### **To change the temperature setting:**

Use a cup, thermometer and meter to check continuity. Using the cup, mix hot and cold water until the thermometer shows the desired temperature for the enclosure. Insert the plain end (not the threaded end) of the thermostat into the water and check continuity across the leads. Adjust screw until switching occurs (slight turn of the adjusting screw). The thermostat will be set to actuate at the temperature of the water.

If the temperature at the mounting location of the thermostat changes very slowly, the solenoid valve may chatter. This can be corrected by changing the thermostat location or by adding the Model 4519 .002 Microfarad Capacitor across the leads (included).

### **HAZARDOUS LOCATION CABINET COOLER COLD FLOW**

This information will be used to properly size a spark arrest vent for the purge system that needs to be used on any Hazardous Location Cabinet Cooler.

<b>Cabinet Cooler Part Number</b>	<b>Maximum Cold Flow (SCFM)</b>
HZ4610, HZ4610SS, HZ4610SS-316	10.7
HZ4615, HZ4615SS, HZ4615SS-316	16.1
HZ4625, HZ4625SS, HZ4625SS-316	26.8
HZ4630, HZ4630SS, HZ4630SS-316	32.2
HZ4635, HZ4635SS, HZ4635SS-316	37.5
HZ4640, HZ4640SS, HZ4640SS-316	42.9

### **SOLENOID VALVE**

Systems with thermostat control include the Model 902019, 902020 or 902021 NEMA 4-4X Solenoid Valve. Mount the solenoid valve on the compressed air line between the filter and the Hazardous Location NEMA 4-4X Cabinet Cooler. The solenoid valve requires 120V/60Hz, 110V/50Hz, 240V/50/60Hz, or 24VDC supply. A green ground wire has been provided for grounding. All wiring should be installed in liquid-tight conduit. The valve is normally closed, actuated open. In most cases, it is controlled by the thermostat.

**TROUBLESHOOTING & MAINTENANCE**

**If the Hazardous Location NEMA 4-4X Cabinet Cooler is not producing cold air**, check the pressure by installing a gauge at the compressed air inlet of the cooler. Large pressure drops are possible due to undersized lines, restrictive fittings and clogged filter elements.

**For replacement or repair filter and regulator parts, contact EPUTEC at +49 8191 91 51 19 0 or [info@eputec.de](mailto:info@eputec.de).**

If you have any questions or problems, please contact:

EPUTEC Drucklufttechnik GmbH.

Haidenbucherstr. 1

86916 Kaufering

Phone: +49 8191 91 51 19 0

Fax: +49 8191 91 51 19 91

Email: [info@eputec.de](mailto:info@eputec.de)

Website: [www.eputec.de](http://www.eputec.de)

